



Lid mount:
put the lid on top of the container
and to secure it, push in the direction
shown by the vertical arrow.
To open turn the lid towards left
as indicated by the arrow



How to insert the filter holder: keep the holder horizontal and its handle in the direction of the machine mid-section; push it upwards and secure it well towards right. Lift the handle all the way upwards, it will automatically set in the right position. Push it back again and with one hand squeeze the two arms to check it.




To make coffee: with the handle lowered pour water in the container (if in a rush, use hot water), secure the lid, insert the plug, rotate gently the switch that makes the control lamp turn on: said lamp will automatically turn off when the water is boiling (see the setting of the thermostat T). The machine is ready to make coffee.



Remove the filter holder and with the measuring cup (included) put one or two doses of ground coffee. With the same measuring cup make sure the coffee is level and clean the borders of the filter holder. Reinsert and secure the holder, put the cups under it, lift the handle all the way then release it for 3 or 4 seconds (not more), then lower it applying a constant pressure.




Lift and push the handle to get the desired quantity of coffee cream. To drain the spent coffee lift the handle half-way and lower it fast, repeat until small bubbles form from the holes in the filter holder.

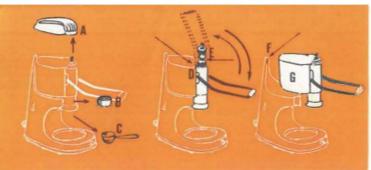

Dismantling the CARAVEL for cleaning.

With the lid (A) removed press on the blocking lever (F) in the direction indicated by the arrow. Remove the half-ring (B) and lift the container (G). It can be washed liberally. Put the container back in its site and with the thumbs press the rear borders until you hear a click (very important for proper functioning). Reinsert the half-ring (B). We highlight that the CARAVEL can be completely dismantled for easy cleaning and fast repairs.

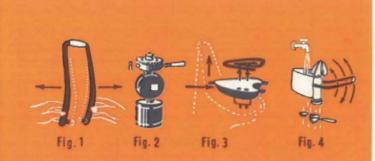

Thermostat settings:

If control lamp turns off when the water is boiling the thermostat setting is right. If the lamp turns off too soon, unscrew a bit the tuning screw (T) until you obtain the right relation between water and lamp. If the lamp is still lit and the water keeps boiling, screw (T) to cause the lamp to turn off.

Tips:

To preheat the machine, lift and push down the handle without any coffee in the filter a couple of times. Vinegar, left for a few hours inside the water container, removes calcium deposits.

The right grind of the coffee is important to obtain a thick crema. If you have no creama, the coffee grind is too coarse. If it is difficult to press then the coffee grind is too fine.

Techical data. Holds water for 12-14 coffee cups. Average power usage: 110Wh. Size 19x29x32 cm.